 


Metal Pipe Flow

VIV
Metal Pipe Flow

User's Guid

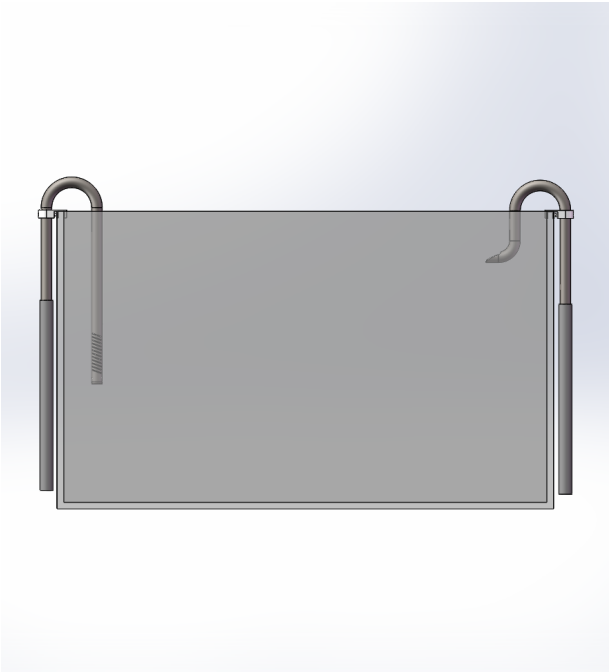

IMPORTANT


Before the installation of this product, make sure to read this instruction manual carefully and understand all its directions.

Safety Instruction

*Please read carefully

- ❖ This product is designed for growing and maintaining aquatic plants and tropical fish in an aquarium. Please do not use this product for improper purposes.
- ❖ Read this instruction manual carefully and follow its direction for using this product.
- ❖ VIV is not responsible for death and/or disease of aquatic plants or organisms.
- ❖ This product is made of stainless steel and may be deformed if dropped and subjected to impact or if force is applied unintentionally.
- ❖ Although the product is finished carefully, special care should be given to avoid a possible injury when handling the product since an edge of a stainless-steel part may be sharp or there might be a burr.
- ❖ **KEEP OUT OF REACH OF CHILDREN**

Accessories List

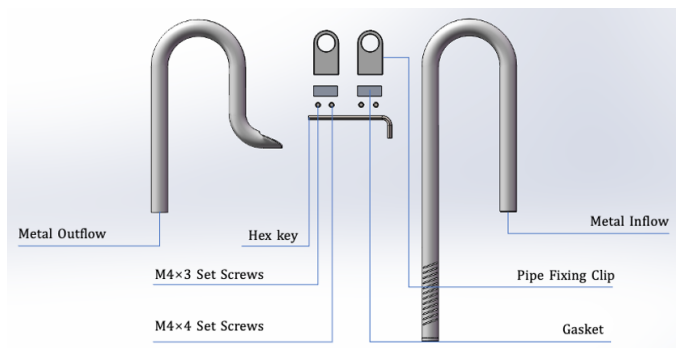

How to use

The METAL PIPE FLOW SERIES is used by connecting it to the hose of an external filter.

Make sure that the outside diameter of the pipe matches the inside diameter of the external filter hose to be used.

S100-02 Pipe diameter: Ø13

Compatible with Clear Hose: Inner diameter 12mm / Outer diameter 16mm

S100-05 Pipe diameter: Ø17

Compatible with Clear Hose: Inner diameter 16mm / Outer diameter 20mm


S200-01 Pipe diameter: Ø13

Compatible with Clear Hose: Inner diameter 12mm / Outer diameter 16mm


S200-03 Pipe diameter: Ø17

Compatible with Clear Hose: Inner diameter 16mm / Outer diameter 20mm

- 1) To install METAL PIPE FLOW need to fix the clips on the edge of the aquarium glass first.

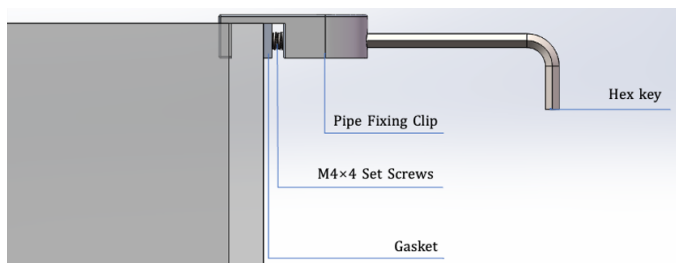

- 2) After inserting the clip, firmly connect the Inflow and Outflow hoses of an external filter. Insert the hose 1.5-2cm.

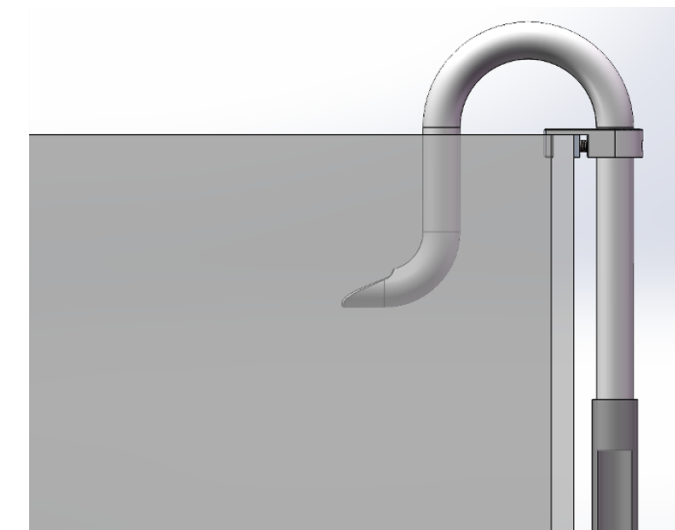

- 3) Fix the METAL PIPE FLOW with clip to the outside of the tank. Then, start the external filter according to the instruction manual of the external filter.



- *The METAL PIPE FLOW for Inflow has an end cap on the inflow strainer. By removing the end cap, cleaning becomes easier.

Caution

- The METAL PIPE FLOW SERIES is designed for rimless tanks. It may not be able to be installed in rimmed tanks
- Use a new hose when connecting to METAL PIPE FLOW. Never use worn hoses as they are inelastic and easy to come off.
- If it is difficult to connect the hose and pipe, wet the connection part with water so that it becomes easier to insert the pipe into the hose. Also, if the hose and pipe are difficult to remove, it becomes easier to remove them once the pipe is pushed into the hose.
- The end cap (for inflow) of the METAL PIPE FLOW can be removed. Be careful not to apply more force than necessary to the spring part of the end cap, as it may deform.

- Be sure to push the end cap (for inflow) all the way in to eliminate the gap before use.
- The inside of each pipe should be cleaned using SPRING WASHER (optional).
- If old leaves or debris from aquatic plants are sucked into the strainer of the METAL PIPE FLOW for inflow, remove them immediately. If left untreated, the motor of the external filter will be overloaded, resulting in a malfunction or accident.
- Be careful of the back flow of water when removing the hose.

VIV (INTERNATIONAL) CORPORATION LIMITED
H020, Kwai Shing Industrial Building, Hong Kong
E-MAIL : viv_aquarium@hotmail.com

<https://viv.com.hk>